

# WIRING DIAGRAM & INSTALLATION INSTRUCTIONS FOR 99100200 ADAPTER KIT

## CAUTION


- THINK SAFETY, ALWAYS WEAR SAFETY GLASSES WHEN PERFORMING THE OPERATIONS PRESCRIBED IN THESE INSTRUCTIONS
- READ ALL INSTRUCTIONS CAREFULLY BEFORE ATTEMPTING INSTALLATION

### Adapter Kit Installation (Refer to Diagram)

**IMPORTANT:** Use a dielectric compound on all connections to prevent corrosion.

1. Plug in Lamp Adapter Leads, Right and Left, from the Conversion Kit into the two 3-contact female sealed-beam connectors on the main Plow-light Harness. Connect the other ends of the Lamp Adapter Leads, into the vehicle headlamps.
2. On driver side only, connect Female Adapter Lead to the Plow Light Harness Connector. Connect other end of Lamp Adapter Lead into the drivers side (Left) vehicle harness connector, formerly plugged into the headlamps.
3. Continue with the installation by referring to the main plow light Installation Manual.

*NOTE: Passenger side vehicle harness plug should be tucked safely out of the way or secured to vehicle harness with plastic wire tie.*

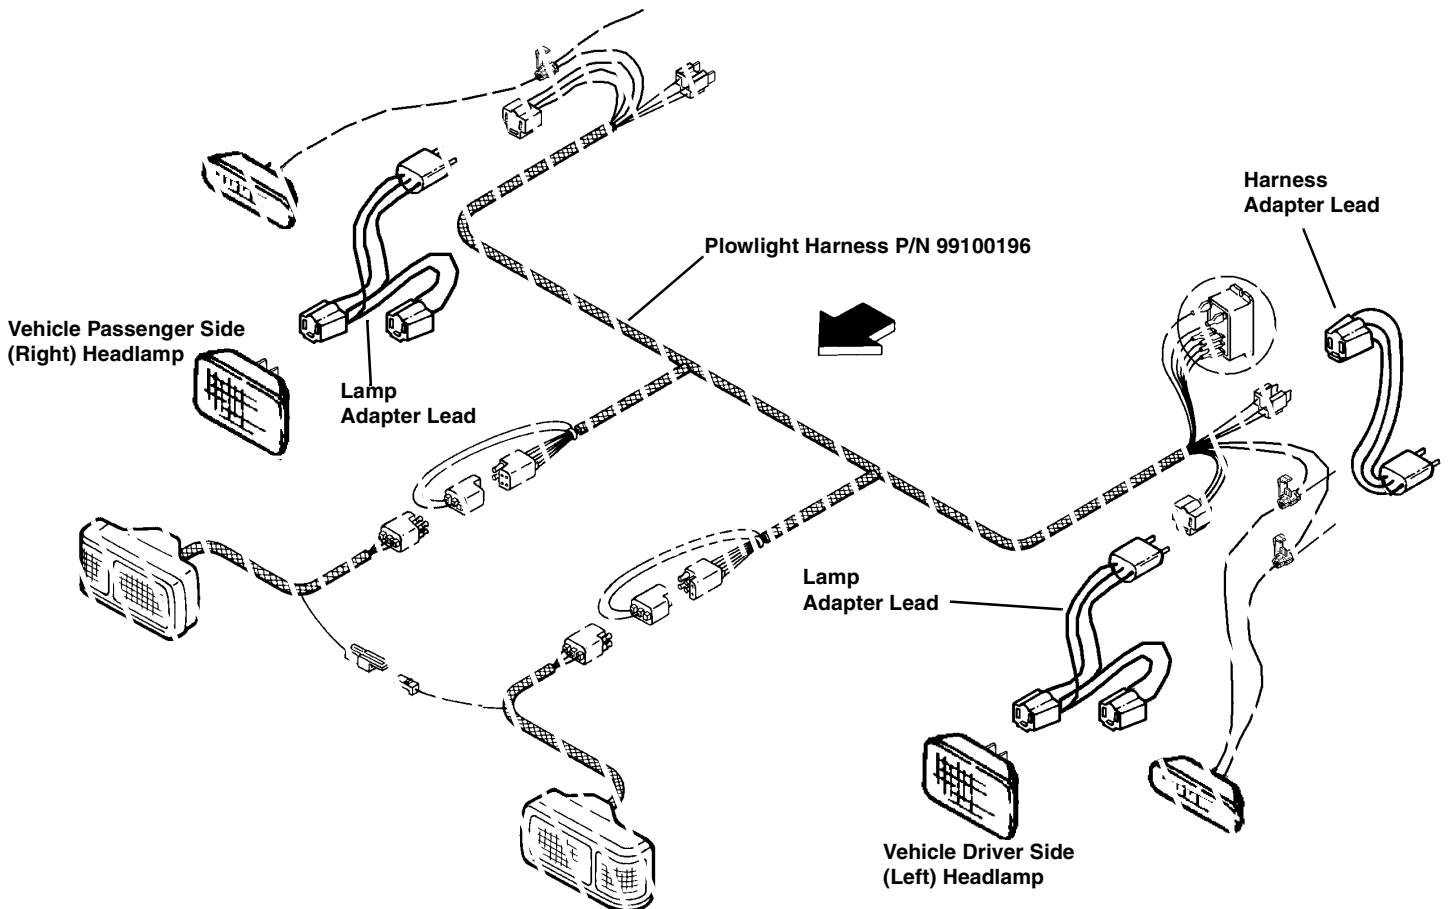

SNO-WAY® INTERNATIONAL, INC.



©1999 Sno-Way®  
International

97100354B